



2.36 in. (60 mm)

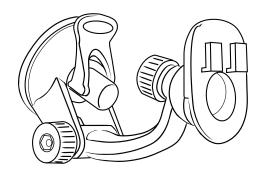


4.33 in. (110 mm)

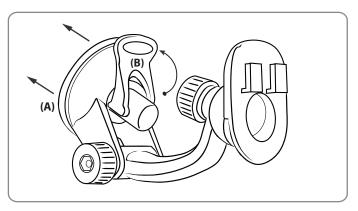


Windshield Installation

Step 1. Push the pedestal suction cup (A) firmly to the windshield. Flip the lever (B) down to secure the suction cup.

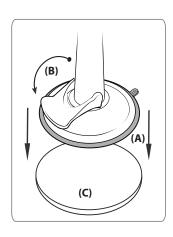

Dash Installation (AP036 adhesive disc sold separately)

- Step 1. Locate a safe flat surface on the dash or console to mount the pedestal. Clean the dash with the alcohol pad provided. Let the dash surface dry before applying the adhesive disc (C).
- Step 2. Push the pedestal suction cup (A) firmly to the disc (C). Flip the lever (B) down to secure the suction cup.

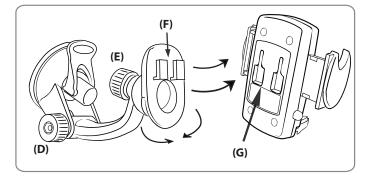

Pedestal Adjustment and Cradle Attachment

(Cradles sold separately)

- Step 1. Adjust the angle of the pedestal arm by loosening the adjustment knob (D).
- Step 2. Adjust the angle and rotation of the pedestal head by loosening the adjustment knob (E).
- Step 3. Attach the device cradle to the dual-T tab head (F) by inserting the T-tabs into the T-slots (G).



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.



The Mobile Mounting Specialists

Consumer Hotline: (USA) (800) 841-0884 (INT'L) (626) 254-9005

www.arkon.com Arcadia, CA 91006 USA Made in Taiwan Mon-Fri. 9am-5pm, PST © Copyright 2007 Arkon Resources, Inc.