


## Installation Instructions for Motorcycle Windshield Adapter




1. Scribe Top Hole Center On Windshield.

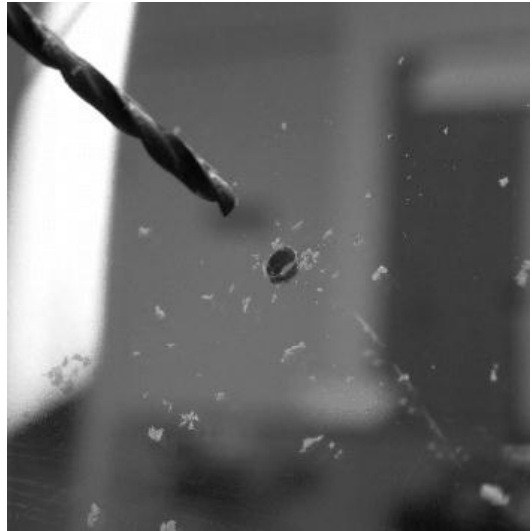

2. Drill 3/16 Dia. Hole Through Windshield.



3. Attach Adapter To Windshield As Shown.

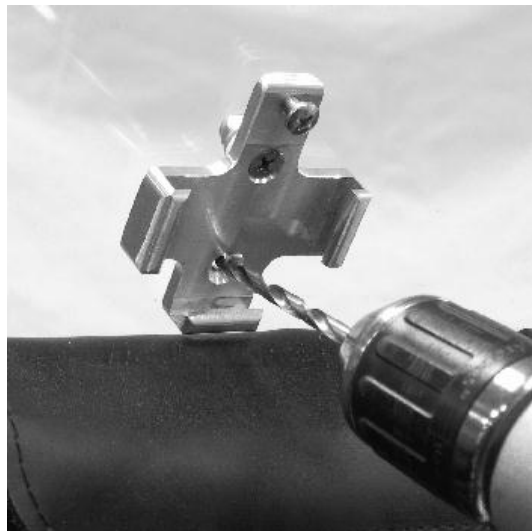

4. Drill 3/16 Dia. Hole Through As Shown.



5. Remove Adapter, Replace Adapter with 5/8 dia. Washers In Between Adapter and Windshield.



6. Fasten Nylon Washers, S.S. Washer and Nuts Completing Installation.